


# 11/75 P1

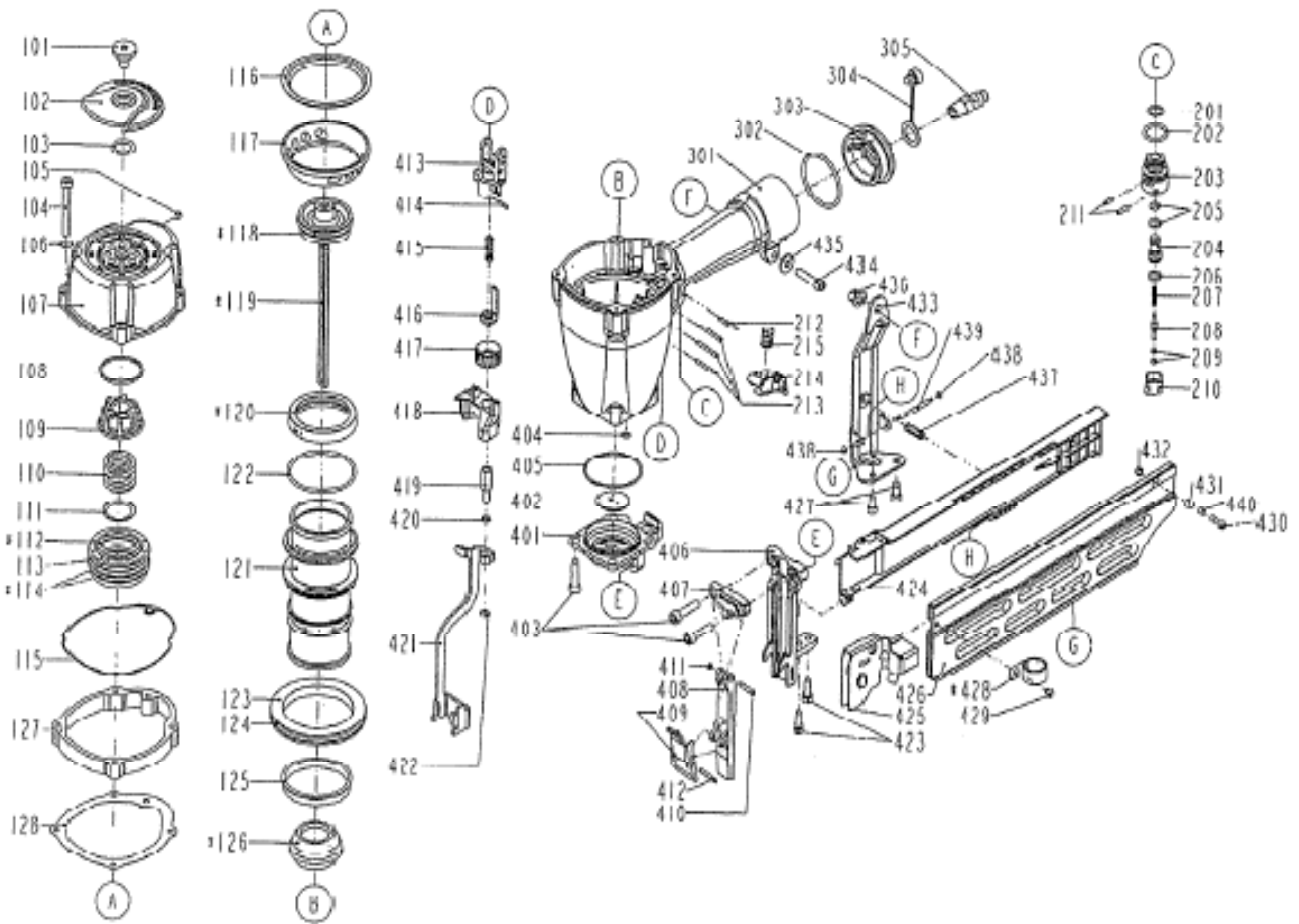

Repère	Code	Français	English	Deutsch	Español	Romana
101	12B00736	Vis	Deflector pad			
102	12B00739	Défecteur	Deflector			
103	12B00116	Joint	O-ring			
104	12B02185	Vis	Screw			
105	12B00205	Vis	Screw			
106	12B02219	Rondelle	Flat washer			
107	12B01341	Tête	Cap			
108	12B01356	Rondelle	Washer seal			
109	12B01346	Amortisseur	Seal			
110	12B01330	Ressort	Compression spring			
111	12B01357	Rondelle	Washer			
112	12B00751	Joint	O-ring			
113	12B01338	Valve	Valve piston			
114	12B01408	Joint	O-ring			
115	12B01718	Joint	Packing			
116	12B00737	Anneau de retenue	Press ring			
117	12B00731	Bague de Cylindre	Cylinder press ring			
118	12B01404	Joint	O-ring			
119	12B02220	Piston	Driver unit			
120	12B01377	Bague	Collar			
121	12B02222	Cylindre	Cylinder			
122	12B00753	Joint	O-ring			
123	12B00733	Bague	Cylinder spacer			
124	12B00748	Joint	O-ring			
125	12B01148	Joint	Cylinder ring			
126	12B00342	Amortisseur	Bumper			
127	12B02224	Entretoise	Cap			
128	12B02225	Joint	Cylinder cap seal			
201	12B00324	Joint	O-ring			
202	12B00122	Joint	O-ring			

203	12B00269	Couvercle	Plunger cap			
204	12B00167	Servo commande	Valve plunger			
205	12B00212	Joint	O-ring			
206	12B00209	Joint	O-ring			
207	12B00168	Ressort	Spring			
208	12B00268	Tige de servo cmd	Plunger			
209	12B00039	Joint	O-ring			
210	12B00267	Tête de valve	Trigger valve head			
211	12B00139	Goupille	Spring pin			
212	12B00016	Goupille	Spring pin			
213	12B00401	Goupille	Spring pin			
214	12B00326	Gâchette	Trigger unit			
215	12B00384	Ressort	spring			
301	12B01252	Corps	Gun body unit			
302	12B00218	Joint	O-ring			
303	12B00355	Couvercle	End cap			
304	12B00020	Bouchon	Dusty cover			
305	T023901	Raccord	Air plug			
401	12B01717	Pied de cylindre	Base			
402	12B03017	Plaque de guidage	Driver guide			
403	12B01223	Vis	Screw			
404	12B00419	Joint	O-ring			
405	12B00413	Joint	O-ring			
406	12B02226	Plaque intermediaire	Driver guide			
407	12B02227	Couvercle	Driver guide cover B			
408	12B02228	Plaque avant	Driver guide cover A			
409	12B02204	Loquet	Lock handle unit			
410	12B01735	Goupille	Feed finger plug			
411	12B00368	Anneau de retenue	PU retainer			
412	12B01106	Goupille	Spiral pins			
413	12B00349	Guide de sécurité	Safety guide			
414	12B00397	Goupille	Spring pin			
415	12B01720	Ressort	Safety spring			
416	12B02382	Sécurité B	Safety B			
417	12B00391	Molette d'ajustement	Adjust Axie			
418	12B00385	Couvre sécurité	Cover safety			
419	12B00392	Axe d'ajustement	Adjust rod			
420	12B00409	Joint	O-ring			
421	12B02229	Sécurité	Safety B unit			
422	12B00396	Circlips	E-ring			
423	12B02230	Vis	Screw			
424	12B02215	Couvercle	Mounting bracket			
425	12B02231	Poussoir	Pusher			
426	12B02232	Magasin	Magazine A			
427	12B00221	Vis	Screw			
428	12B01728	Ressort	Spring			
429	12B02211	Goupille	Fixed pin			
430	12B02233	Loquet	Door latch			
431	12B00937	Ressort	Latch spring			
432	12B02490	Ecrou	Lock nut			
433	12B02234	Support	Positioning sheet			
434	12B01959	Vis	Screw			
435	12B00564	Rondelle	Flat washer			
436	12B00567	Ecrou	Bolt cap			
437	12B00931	Ressort	Safety spring			
438	12B01086	Anneau de retenue	O-ring			
439	12B00947	Goupille	Hinge point			
440	12B02214	Guide	Deep impact socket			